




Tile Top Dining Table Assembly and User Manual ITEM: FRN-101391t

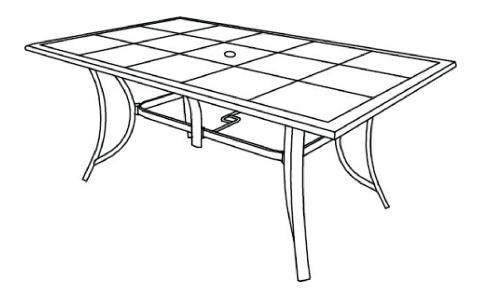

NOTE: The schematics in this manual are for assembly and operation illustration only. They may differ from the chair's actual appearance.

If you have any questions, problems or need additional parts please **do not return** to the place of purchase. Contact our customer service department toll free at **1-855-880-7205** or email us at **customerservice@atleisure.com**

PICTURE	DESCRIPTION	QTY(PC)
A.	Top Frame	1
В.	Leg Brace	1
C.	Leg	4
D.	Supporting Tube	2
E.	Tile	15
F.	Cast Aluminum Part with Umbrella Hole	1

3. Hardware Contents |

Instructions of Set-Up & Operation 4.

PICTURE	DESCRIPTION	QTY(PC)
G.	Сар	18
Н.	Inner Hexagon Wrench	1
	Bolt (M6×15)	6
J.	Washer	18
K. (9)	Bolt (M6×25)	12

PREPARATION


Assemble product on a soft surface to prevent damage during assembly. Before assembling make sure all parts are present. Compare parts with package contents list and diagram above. If any part is missing or damaged, do not attempt to assemble the product or return to the place of purchase. Contact our customer service toll free at 1-855-880-7205 for replacement parts.

Tools Required for Assembly: Hexagon wrench included in package.


1. Place the top frame on a soft & clean level.




2. Attach leg to top frame. Do not tighten the bolts too much.

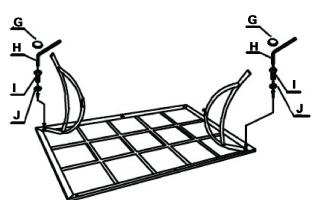


3. Attach leg brace to legs. Do not tighten the bolts too much.

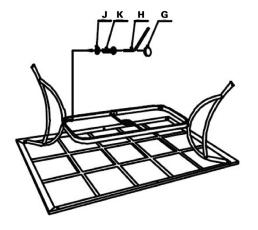

4. Attach the other two legs & supporting tube to top frame, then attach leg brace to legs, finally tighten up all the bolts.

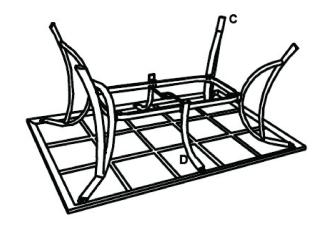

5. Turn table over and put the tiles & cast aluminum part with umbrella hole onto table top frame.

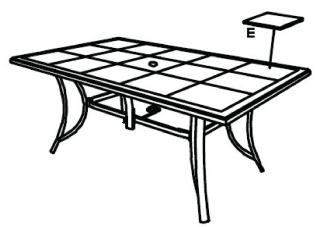

One year limited frame warranty

Frame is warranted to be free of manufacturing defects for 1 year from purchase date. If the frame of your furniture fails (i.e. broken frame or weld) within the first year of ownership, ATLeisure LLC will repair, provide replacement parts, or replace the product at our option. Frame finishes are warranted against blistering, cracking, or peeling for 1 year from purchase date.

This is a residential use warranty only. Warranty is void for product used in commercial settings. This warranty is a limited warranty and applies to the original purchase only. Proof of purchase is required.

NOT COVERED UNDER WARRANTY

Failure caused by unreasonable or abusive use, fire, freight damage, acts of nature (such as, but not limited to freezing or high winds), suntan oil or other chemicals, normal fading, scratching or chipping of the finish, fading, weathering or staining or discoloration of furniture, accidental damage, repair, or modifications by customer, glass breakage, normal wear and tear are excluded from the warranty. Furniture used in commercial, contract or any other non-residential applications; clearance items, and display models are not covered under this warranty. In no event shall ATLeisure LLC's responsibility exceed the value of the replacement part/product. Freight damage is not covered under this warranty. Freight and packaging charges to return a product or part are not covered under this warranty.

7. How to File a Claim

If you are within your warranty, to file a claim you **must** have your receipt and pictures of the damaged part of your product. Email information to us at **customerservice@atleisure.com** or contact us through the website: **www.atleisure.com**

Caring For Your New Furniture |

• Clean with a cloth, mild soap and water.



www.atleisure.com ATLANTA, GEORGIA

Customer Service Toll Free 1-855-880-7205 Monday through Friday from 8:00am-5:00pm (Eastern Time)